♦ MoistTech Corp.

Moisture Measurement & Control From Lab To Line

പ് Talc Concrete 🕻 CHALK • ASH hemicals

C C S - 3 0 0 0

Online NIR Moisture Sensor Near Infrared Measurement



MoistTech.com

MoistTech's Online **NIR Moisture** Sensor

CC2.3000

CCS-3000 WIDE **ARRANGE OF** APPLICATIONS **INCLUDE:**

✓ Bauxite

✓ Bentonite

✓ Ceramics

✓ Chemicals

✓ Chalk

✓ Clay

- ✓ Coal
 - ✓ Coke
 - ✓ Concrete
 - ✓ Detergents
 - ✓ Explosives
 - ✓ Fly Ash
- ✓ Limestone Crushed

INSTALLATION LOCATIONS

The sensors can be installed using the bracket on the back/ top of the sensor 4'' - 16'' (inches) from the product. The MoistTech sensor has many options for installation including:

- Belt, Screw, Drag & Enclosed Conveyors
- Chutes, Cyclones & Bins
- Dryer In/Out
- Pipeline or Pneumatic Conveying using our Flange window or Sampler options.

KEY BENEFITS FOR USERS:

Product Quality Monitoring

Allows immediate production line adjustments to improve product quality and consistency

Process Optimization

Allows 100% monitoring of your production process to reduce product that is "out of specification"

Fuel Consumption Savings

Reduce your energy usage as the drying/cooking process can be controlled resulting in a reduction in energy consumption

Water Savings

Reduce your water usage by continuously monitoring moisture content

Dust Prevention Help reduce the risk of explosions due to dust



PRODUCT INFORMATION

MoistTech is widely regarded as the market leader and #1 supplier of online Moisture Analyzers for the chemical and mineral industry. It is only natural that MoistTech has come to the industry with the CCS3000, a revolutionary new nonhazardous approach to the moisture analysis for some of the toughest application in the industry.

MoistTech is dedicated to providing unique and creative solutions to the industry and offer a wide range of analyzers using several innovative technologies for applications considered difficult to measure with traditional non MoistTech technologies. With an online pedigree spanning 8 generations of analyzers MoistTech is well positioned to meet the exact needs of the industry.

With experience in over 5,000 applications globally and thousands of equipment installs, MoistTech represents the Diamond standard in robust, reliable and dependable technology for harsh environment process measurement and precise product control.

NEAR INFRARED (NIR) TECHNOLOGY

All molecular bonds absorb specific wavelengths of light. Hydrogen bonds including O-H (water); C-H (hydrocarbon) and N-H (ammonia) all absorb strongly in the NIR spectral region. The amount of NIR energy reflected at a given wavelength is inversely proportional to the quantity of absorbing molecules in a product.

The NIR technique is a non-destructive, noncontacting measurement. MoistTech's sensor utilizes multiple wavelengths of NIR light, projected onto the product at a very high repetition rate. The reflected light is then measured using a digitally enhanced detection system and thousands of data points are sampled every second.

- ✓ Foundry Sand ✓ Green Sand ✓ Gypsum ✓ Iron Ore
- ✓ Minerals
- ✓ Ore Extraction ✓ Soda Ash & Mining
- ✓ Potash
- ✓ Sand
- ✓ Sinter Mix

DISPLAY OPTIONS

In addition to the MoistTech management software, MoistTech offers several read-out options to display and/or adjust the measurement outputs.

- Digital Panel Meter (DPM) connected by 4-20mA output
- Full Color Touch Operator Panel (OP-14) PLC based connected by RS-232C serial. (provides trending graph)
- Color Touch Operator Interface (OI) connected by Ethernet.

(OP-14 & OI provide operators & engineers the unlimited ability to make changes to gauge parameters, monitor diagnostics and program calibrations all at-line)

MANAGEMENT SOFTWARE

MoistTech has designed a suite of high-tech Windows™ programs to provide user-friendly interfaces for configuration, data logging, and monitoring of diagnostics. With this you can perform calibrations, define gauge and measurement parameters, and set-up and configure up to 50 different product codes. The MoistTech Software package is easy to use and compatible with any PC platform.



CC2.3000

STANDARD FEATURES INCLUDE

- 16-bit conversion and 32-bit processing Wavelength selection with each application
- Advanced digital filtering for noise free signal
- Windows[™] Operating Software .
- . Standard Ethernet Output
- 3 x 4 20 mA Outputs Embedded PC with Flash Memory
- **Optical Window Contamination Monitor** •
- 2 Year Parts & Labor Warranty
- Pre-calibrated to your application

OPTIONS & ACCESSORIES

In addition to the Display Options listed, MoistTech offers many installation options & accessories:

- Flange window with mounting (measure looking into a window)
 - Bulk & Powder Sampler Cup (measure of falling material)
- Snorkel Sampler (measure into the conveyor wall)
- Air or Water Cooling Cover for high temperature with optional auto on/off solenoid

O


63


CCS-3000

- Product Loss Sample Hold Sensor
- Product Temperature Pyrometer

Instrument Enclosure Options:

- Nickel Coated
- IP-67 Enclosure Stainless Steel with cooling
- ATEX Rated
- **Explosion Proof Classification Enclosure**

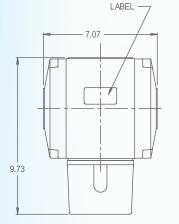

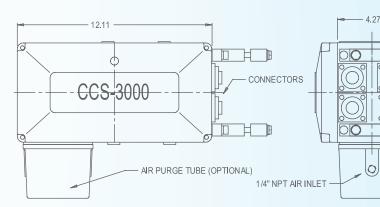

SENSOR SPECIFICATIONS

Measured NIR Constituents: Moisture Ranges: Accuracy (subject to application): Repeatability: **Optical Measurement Distance:** Sampling Size: Calibration Codes: Weight: Enclosure:

Dimensions: Power: **Operating Temperature:**

Calibration:

Ambient Light Sensitivity: Sensor Input/Outputs:

Optional interfaces:

*Above specifications are subject to application

1, 2 or 3 Moisture Ranges: Min 0.01%, Max 97% 0–0.1%, 0–100% PPM Ranges Subject to Application ±0.01% ±0.01% 4-16 in (10-40 cm) Approximately 1.5-in (3.7 cm) diameter on sample 50 Standard 16 lbs (7Kg) Cast Aluminum, IP65 (NEMA 4), Optional IP67 Stainless & Food Grade 12.1 in x 7.1 in x 6.4 in (31 cm x 18 cm x 16 cm) 80-260 VAC (50/60 HZ), Optional 24VDC 0-130°F (0-55°C) Vortec Cooling (High Temp): Max 170°F (85°C) Stainless Steel IP67: Max 200F (93C) Factory Pre-Calibrated, PC Calibration software included, Routine re-calibration is not required None Three self-powered isolated 4-20mA outputs, RS-232/485, Ethernet TCP/IP Profibus, Profinet, DeviceNet, Ethernet IP

MoistTech Corp. Headquarters | 1199 Tallevast Rd | Sarasota, FL 34243



0005-3000